


- X0 DC Klemmleiste
- F01 Fuse 25A
- G01 Starter battery
- G Alternator
- M01 Starter Motor
- K03 Fuel pump relay
- K01 Start relay
- M02 Fuel pump
- M03 coolant pump
- XC2 Connector Thermo switch winding
- XC4 connector coolant pump
- Y1 Fuel solenoid
- T01 Cylinder head thermo switch
- T02 exhaust manifold thermo switch
- T03 winding thermo switch
- P01 oil pressure NO

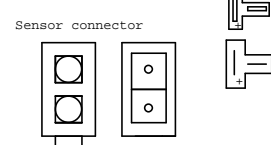

X2